

Hardware

Basis Switch Config for Brocade/ Ruckus Switch ICX 6450 und ICX 6XXX

```
enable
#Set hostname
hostname <name>
# set username and password
username root password yourpasswordthere
# enable authentication for webinterface
aaa authentication login default local
aaa authentication web default local
# disable http
#no web-management http
# enable https
crypto-ssl certificate generate
web-management https
# enable ssh key authentication disable password-authentication
ip ssh key-authentication yes
ip ssh password-authentication no
ip ssh interactive-authentication no
# switch off telnetserver
no telnet server
# import ssh pub keys
ip ssh pub-key-file tftp 192.168.1.8 public.key

# Create Interface and assing ip address
interface ve 1
ip address x.x.x.x/x
exit
# dns server address
ip dns server-address x.x.x.x
# set default route
ip route 0.0.0.0/0 x.x.x.x

# Add Ve 1 to Vlan 1
vlan 1
router-interface ve 1
```

```
exit
# Cerate Vlan 72
vlan 72 name freifunk-client
# set interfaces to get Tagged
tagged ethernet 1/1/1 to 1/1/48
tagged ethernet 1/2/1 to 1/2/4
exit
# set interfaces dual mode for 802.1 Q vlan tags
interface ethernet 1/1/1 to 1/1/48
dual-mode
exit
interfac ethernet 1/2/1 to 1/2/4
dual-mode
exit
## alternativ
# interface ethernet 1/1/1 to 1/1/48 ethernte 1/2/1 to 1/2/4
# dual-mode
```

Revision #3

Created 2026-01-18 21:39:31 UTC by Subjekt_91

Updated 2026-01-25 00:45:24 UTC by Subjekt_91