

Spacebutton

IP (Tasmota Dashboard): 10.13.37.187

Homeassistant Entity: Spacebutton

Homeassistant Sensors:

- `Primary Button` -> Big Button
- `Secondary Button` -> Small Button

To reconfigure pins, change them in the Tasmota interface. It's important to set them to "Switch".

Tasmota by default tries to link relays to the switches, to decouple use `Setoption 114`

By default, the Off point on the big switch (and the down pointing of the little switch) are interpreted as on, and vice versa. To change that, use `SwitchMode1 2` and `SwitchMode2 2` respectively.

Revision #1

Created 2026-02-25 17:10:11 UTC by Max Bossing

Updated 2026-02-25 17:31:15 UTC by Max Bossing